




View on line A

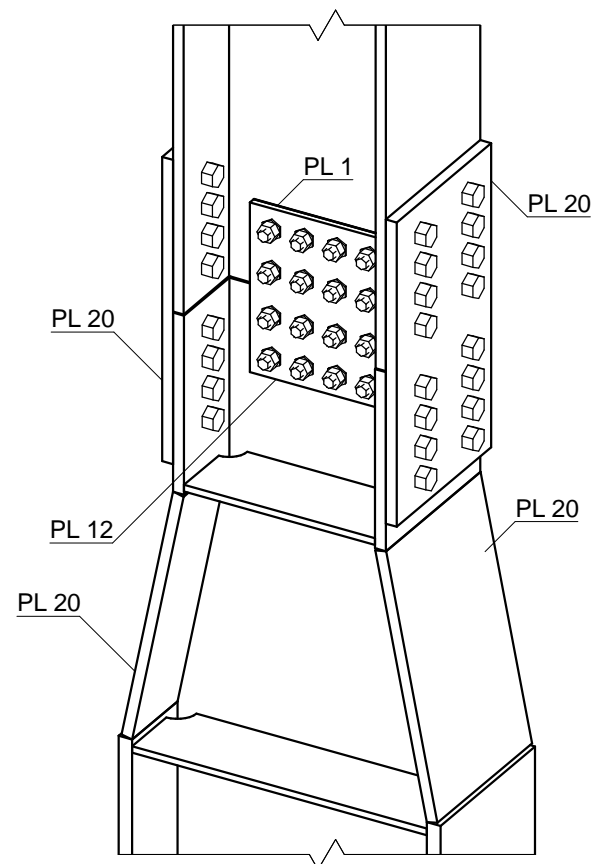


3D View

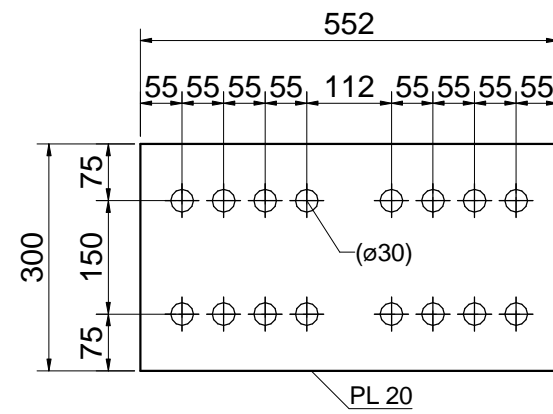


Flange Plates

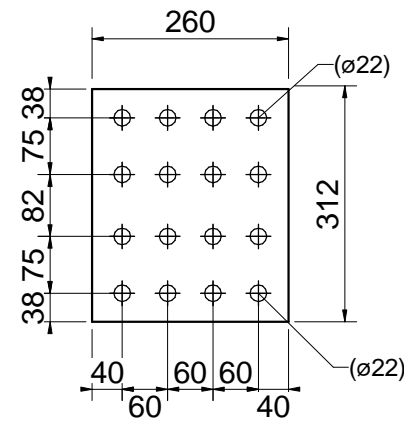


Web Plates

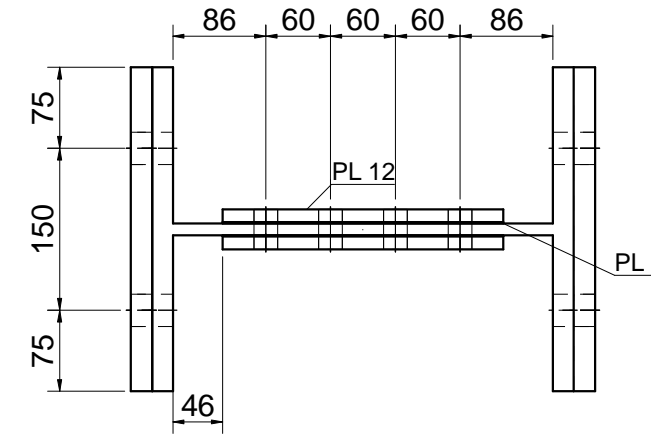


A - A

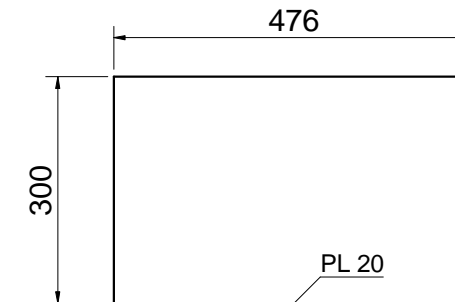


Reducing Flange

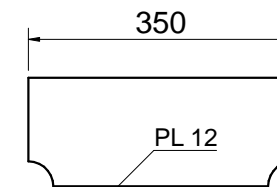


Short Stiffener

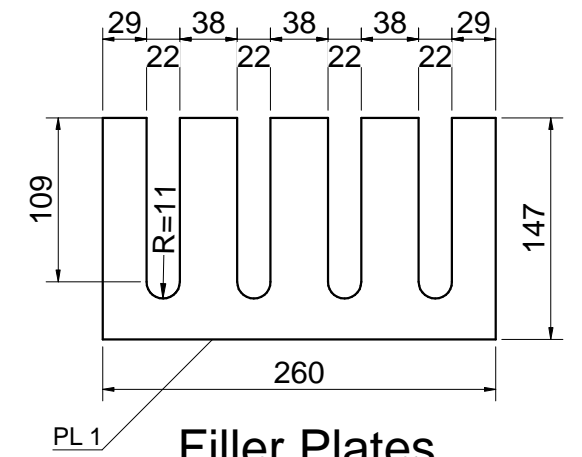

Filler Plates

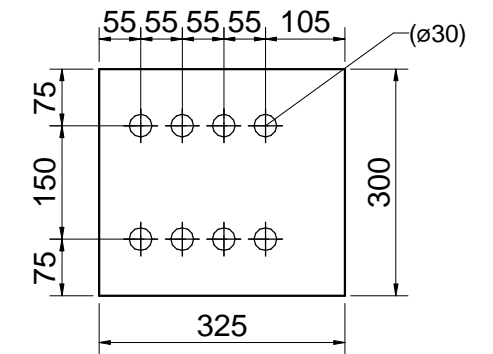

Reduced Flange

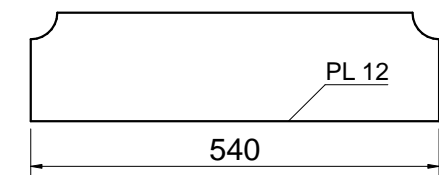

Long Stiffener

Model the Variable I section Splice as shown.

1. All materials are S235
2. Do not use any macros
3. Filler Plates are provided to fill the gap due to web thickness differences
4. You can watch the tutorial video on our channel  
<https://youtu.be/mLcIhoH9yDw>