




CPJ One sided T

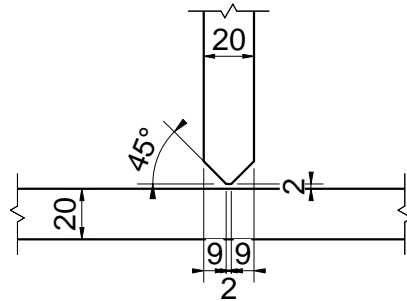

CPJ Double sided T

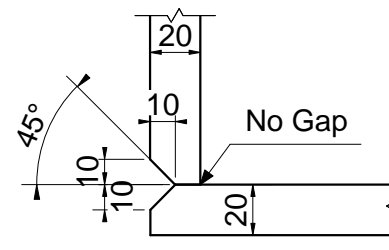

PPJ Double sided C

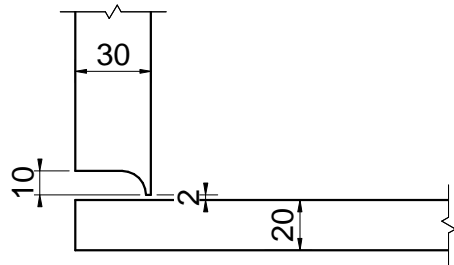


CPJ One Sided C  
J Type Preparation


Model these weld preparations as detailed in the drawing.

=====


- The Welds are either Complete Penetration (CPJ) or Partial Penetration (PPJ)
- All three types namely "Corner" (C) "Tee" (T) and "Butt" (B) are present
- Different thicknesses of plates have been used
- IPE300 Top Flange has been prepared for welding
- Tutorial video: <https://youtu.be/yfPesRzsZ1E>

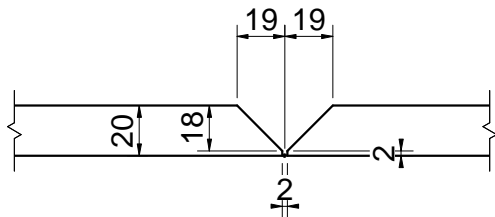

CPJ One sided Butt

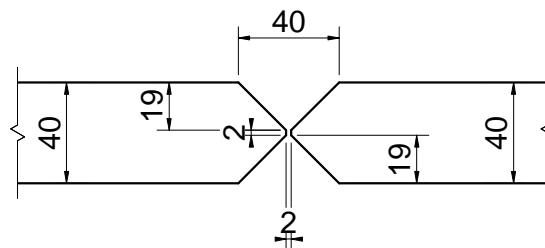

CPJ Double sided Butt

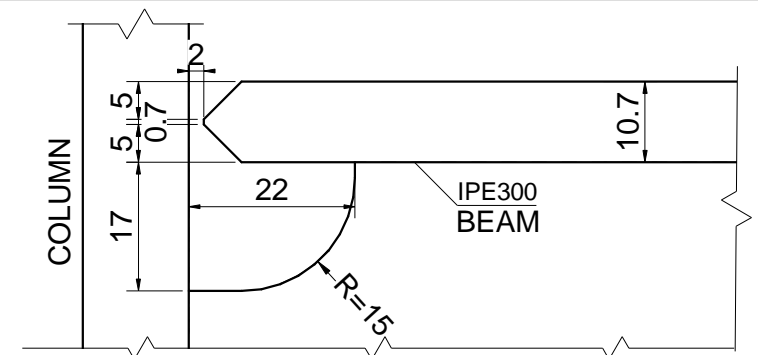

CPJ (Top Flange)